

STAINLESS STEEL ELECTRIC WATER DISPENSER – 5 LITRE

OPERATING INSTRUCTIONS

Please carefully read this important information before use:

1. Keep water dispenser out of reach of children.
2. Place unit on a safe, sturdy surface when using.
3. Do not overfill the water dispenser, follow the markings on the water window.
4. To avoid burns, do not touch or put your hand near the steam vent. When opening lid, do not allow steam to come in contact with your skin. Do not touch hot surfaces. Use knobs or handles.
5. **Extreme caution** should be used when using/moving any appliance containing hot liquid.
6. This unit is equipped with a safety feature – you can lock the unit so the user cannot dispense water (great to use around children). Use the **UNLOCK** button on the top control panel to prevent the manual pump from being used. Press the unlock switch on front panel to use dispense button or hands free.
7. The unit includes a boil-dry protection system. The unit will shut off when there is no more water left inside.



INSTRUCTIONS FOR PROPER USE: BOILING WATER

1. Open the lid, pour in water.
2. Do not fill the unit past the maximum water level (**max**). It will cause the water to overflow during boiling.
3. Make sure that the bottom of the unit (around the base) is always dry.
4. Close the lid securely.
5. Plug the water dispenser into the wall outlet. Red light below **"BOIL"** will illuminate.
6. Keep pressing **"REBOIL/TEMP. SET"** until you get the correct temperature. The light will be above each of the temperatures.
7. It will take approximately 20-26 minutes for the water to boil (for full tank).
8. When boiling is complete, **"KEEP WARM"** green light will come on.
9. When ready to dispense hot water, there are three ways to do so:
 - a. **Using DISPENSE button** – Place the cup under the spout and press **"DISPENSE"** button
 - b. **Manually** – Press on the pump on the top of the unit.

- c. **Hands Free** – Press upward on the switch with the rim of the cup (switch is located behind the spout).
10. Press re-boil button to re-boil water that is being kept warm. Time required for re-boiling is about 2-3 minutes if water inside the container is at the maximum water level with room temperature of 68-77 °F (20-25 °C)

INSTRUCTIONS FOR PROPER USE: RE-BOILING WATER

1. Press the **"REBOIL"** button once.
2. Next choose the temperature. Keep pressing **"REBOIL/TEMP SET"** button until you get correct temperature. The light will appear above each temperature.
3. To start re-boiling, press and hold **"REBOIL"** button for 3 seconds. The light next to **"REBOIL"** will turn red.
4. After the re-boiling has completed, the light next to **"BOIL"** and **"KEEP WARM"** will light up green.
5. If the temperature is set to 60°C/140°F, the unit will maintain that temperature in KEEP WARM function.