TEA OR COFFEE CARAFE - 2.5 LITRE

OPERATING INSTRUCTIONS

Please carefully read this important information before use:

- 1. Do not place in/near heat sources i.e.: microwave, stove top, etc.
- 2. Do not use ice or dry ice.
- 3. Do not fill with any carbonated drink.
- 4. Do not drink directly from the pump pot.
- 5. Always inspect interior prior to each use.





INSTRUCTIONS FOR PROPER USE:

- 1. To open pump pot, push buttons on the front of the lid and lift.
- 2. Remove the spout assembly from the flask.
- 3. Fill with desired beverage.
- 4. Replace spout assembly, close lid making sure it is latched in place.
- 5. Place cup under spout. Lift the pump to the open position and press to fill cup.
- 6. When not in use, press the close lever to lock the pump.

7.

TO KEEP BEVERAGES HOT:

Preheat by filling the pump with hot water. After a few minutes, drain and fill to about 1" below the top with hot beverage. A hissing sound may occur if the pump pot is filled with a very hot beverage. This is the result of pressure from air expansion inside. Simply open the cap slightly to relieve the pressure. Be very careful when doing so, steam is extremely hot.

TO KEEP BEVERAGES COLD:

Pre-chill by filling the pump with cold water. After a few minutes, drain and fill with non-carbonated beverages only.